



MGM Brakes

A Division of Indian Head Industries, Inc.

TECHNICAL BULLETIN

SUBJECT: FULL RELEASE OF PARKING BRAKE CHAMBER

- 1.0 Scope: For TR, TR-T and TR-TS Models
- 2.0 MGM spring brake chambers must return to zero stroke to fully release the foundation brakes and for proper readjustment of automatic slack adjusters. To measure the spring brake chamber for full release, first remove the Weatherseal™ Plug from the release tool hole. Insert a ruler, or scale, to measure the distance from the top of the aluminum spring piston to the release tool hole of the steel head. For full release, the distance must be less than 1/2 inches (.50). Remember to reinstall the weather seal cap.

Note: Although the spring piston hole may not be aligned with the release tool hole in the steel head, there will be full release with less than .50 inches.

