

SUBJECT: BREATHER TUBE EXTENSION PROCEDURE USING CLAMPS

1.0 **Purpose**:

To provide a procedure to add a tube section to lengthen a breather tube in the field when the replacement actuator needs to be modified to replicate the breather tube, and/or port positions as per the currently installed OEM actuator.

2.0 **Scope**:

All MGM Brakes models with an external breather tube.

3.0 Material required:

8081128 Rubber Extension Tube or 3/8 Inch I.D. Rubber Vacuum/Washer Hose8052021 3/8 Inch Hose Clamp (2) or Adhesive

NOTE: If rubber extension tube and hose clamps unavailable, use appropriate length of 3/8 lnch I.D. rubber vacuum/washer hose and appropriate adhesive. (Recommend Loctite #414 "Superbond" or equivalent.)

4.0 **Procedure**:

- 4.1 Cut the 3/8" O.D. breather tube approximately half way between the rubber elbows.
- 4.2 Using the recommended procedure in the MGM Brakes Service Manual (Ref Form 5044 J-Series, Form 5011 TR, Form 5042 LTR, Form 5065 Wedge) loosen the service chamber clamp and rotate the spring side to the desired position. Tighten service chamber clamp. NOTE: Units designed for air disc applications are not to be rotated.
- 4.3 If necessary, cut the 8081128 rubber extension tube, or the 3/8" vacuum/washer hose, to a length that will insure a minimum of 1/2 inch engagement over both ends of the cut 3/8" O.D. nylon breather tube.
- 4.4 Install the 8052021 hose clamps (2) over each end of the nylon breather tube, or apply Loctite #414 "Superbond" adhesive, or equivalent, to both ends of the nylon breather tube.
- 4.5 Insert the section of 8081128 rubber extension tube over both ends of the cut breather tube a minimum of $\frac{1}{2}$ inch.
- 4.6 If hose clamps are used, compress clamp with pliers and place one over each end of the rubber extension tube. The edge of the clamp should be approximately .050 ±.015 from the edge of the rubber tube when installed. If adhesive is being used, wait for adhesive to dry before proceeding.
- 5.0 Using the recommended procedure in the MGM Brakes Service Manual (Ref Form 5044 J-Series, Form 5011 – TR, Form 5042 – LTR, Form 5065 – Wedge), check the service chamber clamp for leaks.